



Getting started

With TellStick Net

Dear Customer

This quick guide will take you through installation and show how you can use the basic features of TellStick Net.

We recommend that you regularly check updates on our web site, www.telldus.com. You will also find manuals, a user forum and other ways to find help on the web site.

Content

Package Content	3
Specifications	3
Getting Started with TellStick Net	4
Using the iPhone App	8
Using the Web Based App for Your Smartphone	9
Troubleshooting / FAQ	10
Support	11

Package Content



TellStick Net



Antenna



This Quick Guide



Power adaptor



USB cable



Network cable


Specifications

Frequency	433,92 MHz
Range	Up to 30 meter
Connection	Standard RJ45/Ethernet-connector USB mini-B for power only SMA connector for antenna
Power consumption	Approx. 1 W
Transmission power	Max 10mW
Size	82 x 63 x 23 mm (without antenna)

Getting started with TellStick Net

1. Connecting TellStick Net

- Connect the enclosed network cable between your router or switch and TellStick Net
- Connect the enclosed USB-cable between your router (if it has an available USB port) or the supplied power adaptor and TellStick Net

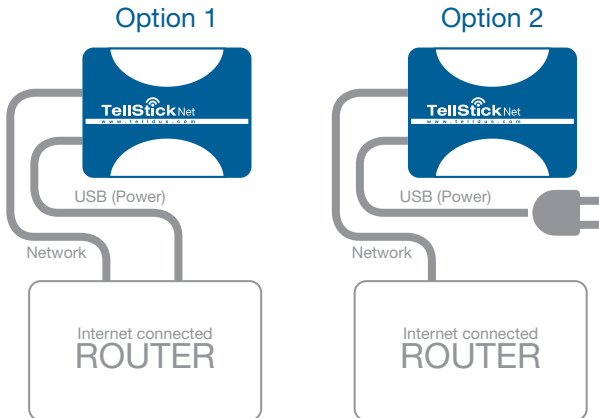

2. Activating your TellStick Net

- Open a web browser and go to <http://live.telldus.com>
- Choose “Create a new account” if you are a new user

Now you have three options for activation of your TellStick Net, please choose the option that suits you the most.

Option 1: Auto detection

In most cases, TellStick Net will be auto detected by Telldus Live! If you see a message on the Telldus Live! website as shown below, please click on the activation link.




Telldus Live!

live.telldus.com

Option 2: Using the code on the label

Go to “My Locations” in TellDus Live!, click the green plus sign and enter the code from the label.




Option 3: Using the QR-code

Use your mobile phone to scan the QR-code on the label located on the bottom of the TellStick Net. It contains a link for activation that opens up in the browser. Follow the instructions.



3. Add your remote socket receivers

- Click the plus sign
- Choose the brand and type of your receiver
- Enter the name of this device, such as “Kitchen”, “Office”, etc
- Depending on the type of receiver, enter the necessary settings
- Click “Save”

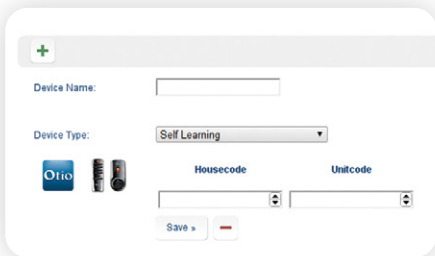

The screenshot shows a white rounded rectangular form with a grey header bar containing a plus sign. Below the header, there are several input fields: a text box for 'Device Name', a dropdown menu for 'Device Type' currently set to 'Self Learning', and two spinners for 'Housecode' and 'Unitcode'. To the left of the spinners are icons for 'Orlo' (a blue square) and two physical remote controls. At the bottom of the form are two buttons: 'Save' with a right-pointing arrow and a minus sign.

4. Edit a device

- Click on the name of the device you like to edit
- Do your changes
- Click “Save”

5. Remove a device

- Click on the name of the device you like to remove
- Click on the minus sign and click “OK”

Using the iPhone App

It's possible to control your devices from an iPhone. When the TellusCenter application is installed, you can control the devices from wherever you are.

1. Go to App Store, search for "TellusCenter" and install it
2. Start the application, click "Settings" and activate Tellus Live!
3. A web browser will open and show a login page
4. Enter your email and password, click Login
5. You're now able to control your devices from your iPhone



Using the Web Based App on Your Smartphone

It's possible to use Telldus Live! on almost any smartphone, without installing an app.

1. Open the web browser in your smartphone and navigate to live.telldus.com
2. Enter your email address and password and click "Login"
3. You are now able to control your devices



Troubleshooting / FAQ

Q: I have no luck learning the remote socket receiver with the code from TellStick Net.

A1: Please check if the remote socket receiver is supported by TellStick Net.

A2: The memory of the remote switch might be full, please try to reset the memory and do the learn process again. Find out how to reset the memory from the manual for the remote switch.

Q: My devices/location are shown as “offline”, what do I do?

A: Please check if the network cable and power supply is connected properly. Please also check if your internet connection is up and running.

Q: I'm not able to control my socket receiver, why?

A1: Please check if the red LED on the TellStick Net is glowing when you try to control your device. A red glow indicates transmission from TellStick Net. If it's still not possible to control the socket receiver, please check if it's configured properly.

A2: If you've been idle for a long time in your web browser, you've might been logged out, please try to login again.

Support

If you need assistance, please go to www.telldus.com and navigate to support. You will be able to read our frequently asked questions or submit a support ticket.

Fill in the form and click “Help Me”. Please remember to provide as much information as possible, even the smallest details may help. We will do our best to help you with your problems.



www.telldus.com